Flash Phenom Noir firmware v2.11 (updated Aug 2nd, 2020)



Overview

Supports CTB format. (please use Chitubox 1.6.4.3 Beta CTB when saving, as of July 24, **Chitubox 1.6.5 is not stable** and cause a problem for this board)

Warning, upgrade firmware will reset the home position to default. If you use custom z-zero position leveling, you may have to set it again.

Installation step

- 1. Download <u>Phenom Noir firmware v2.11.zip</u> https://drive.google.com/file/d/1wu7qlh06jHrzpGntyOkpZo AOUy6A3AY/view?usp=sharing
 - 2. Format a USB drive to FAT32, you can use tools from SD Formater https://www.sdcard.org/downloads/formatter/
 - 3. Extra content of Phenom firmware v211.zip to the USB drive's root directory **DO NOT change any of the file name!**

Phenom Noir firmware v211.zip 3 items


- FPGA_H1_P321_F11_CTB2_3840_2160_25HZ.CBD
- Phenom Noir chitubox f211.gcode
- update.LCD
- 4. Turn off the printer if it is still on. And then turn it on. (Critical)
- 5. Go to Print function. Select FPGA_H1_P321_F11_CTB2_3840_2160_25HZ.CBD and print.
 - Wait for it to complete.
- 6. Go to Print function. Select Phenom Noir chitubox f211.gcode and print. Wait for it to complete
- 7. Go to Print function. Select update.LCD and print.

This will turn off the printer and reboot. **Do not perform any operation until the printer** is full boot up again.

If you are already on F2.9, this file may not flash and give you a message that the same file cannot be upgraded. This is normal and just proceed to next step

- 8. When step 6 is done. Turn off and then turn on the printer
- 9. Go to System -> Information to check

Make sure to export CTB format when slicing as the firmware will no longer print cbddlp. Download below:

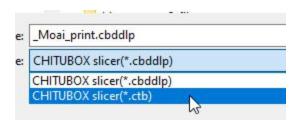

We recommend Chitubox 1.6.4.3 Beta or later version and use CTB format to print. You can down the slicer here:

https://drive.google.com/drive/folders/1EWqZw656HbG7QJFlpsgj5PrLyVinardF?usp=sharing

For flashing step, you can check out this video:

https://youtu.be/B_fhXfrkeuU